


Installation Drawing

Firestopping in wall penetrations (pipes/cables)

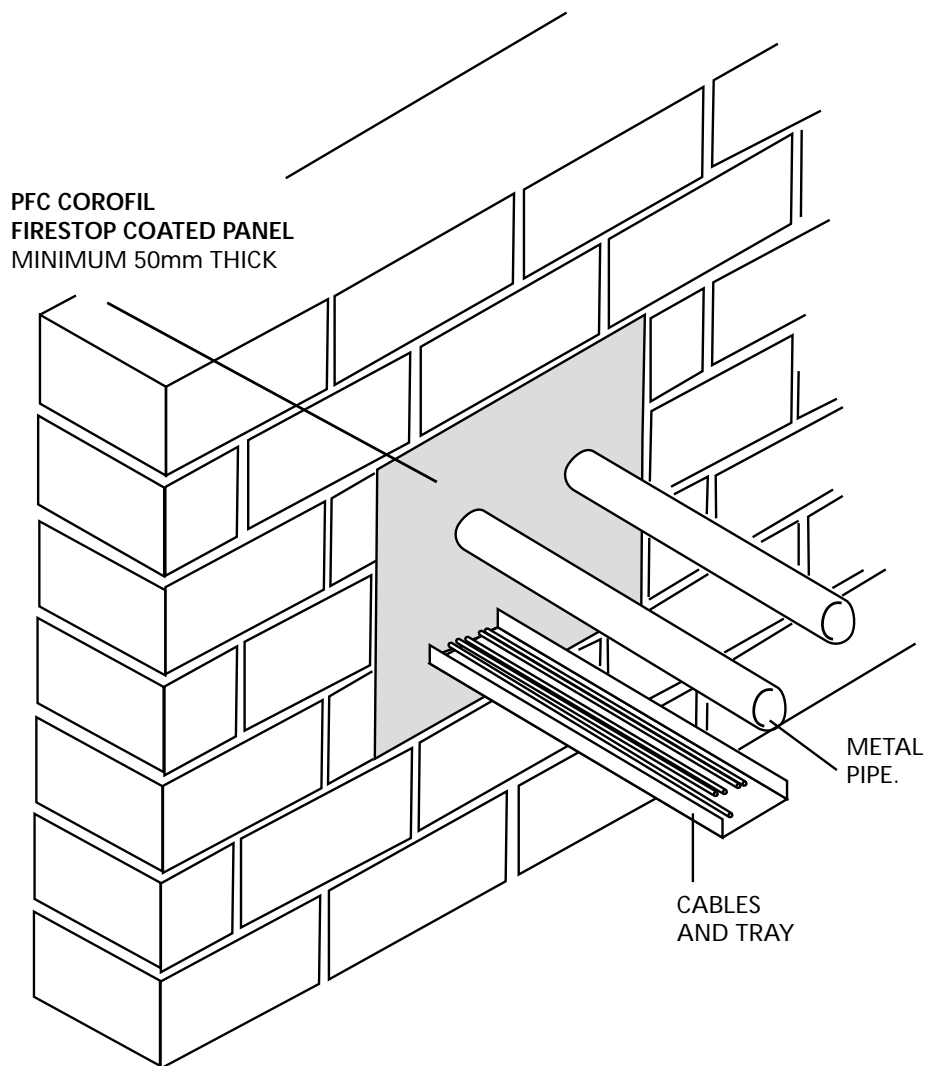

Plastic pipework must be sleeved with PFC Corofil Firestop Collars prior to installing the system