


# Installation Drawing

Firestopping in conjunction with metal deck walls and roofing -  
along corrugations

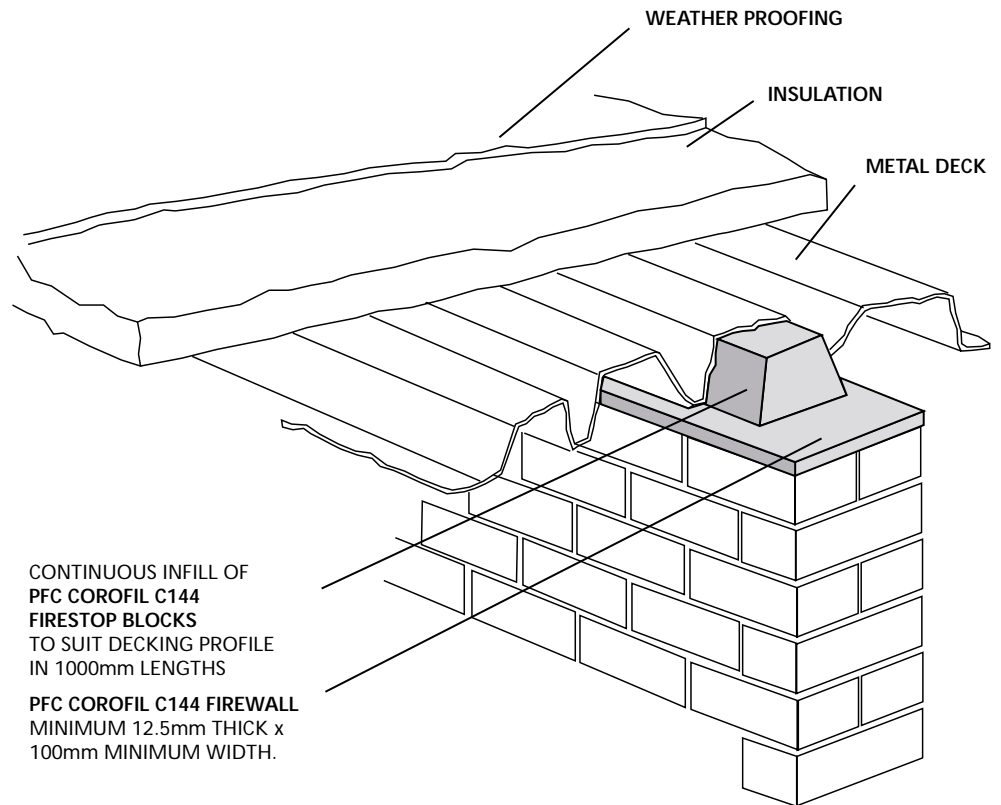

CONTINUOUS INFILL OF  
PFC COROFIL C144  
FIRESTOP BLOCKS  
TO SUIT DECKING PROFILE  
IN 1000mm LENGTHS


PFC COROFIL C144 FIREWALL  
MINIMUM 12.5mm THICK x  
100mm MINIMUM WIDTH.

## INSTALLATION SEQUENCE

1. C144 BLOCKS BONDED TO DECK WITH 10.149 CONTACT ADHESIVE SUPPLIED IN AEROSOL SPRAY CANS.
2. C144 FIRESTOP STRIP IN CONJUNCTION WITH WALL CONSTRUCTION
3. THICK COAT OF FIRECHECK PAINT TO BOTH SIDES ON C144 AND UNDERSIDE OF C144 BLOCKS. IF VISIBLE. OVERLAP ONTO BLOCKWORK BY APPROX 25mm.

# Installation Drawing

Firestopping in conjunction with metal walls & deck roofing -  
across corrugations

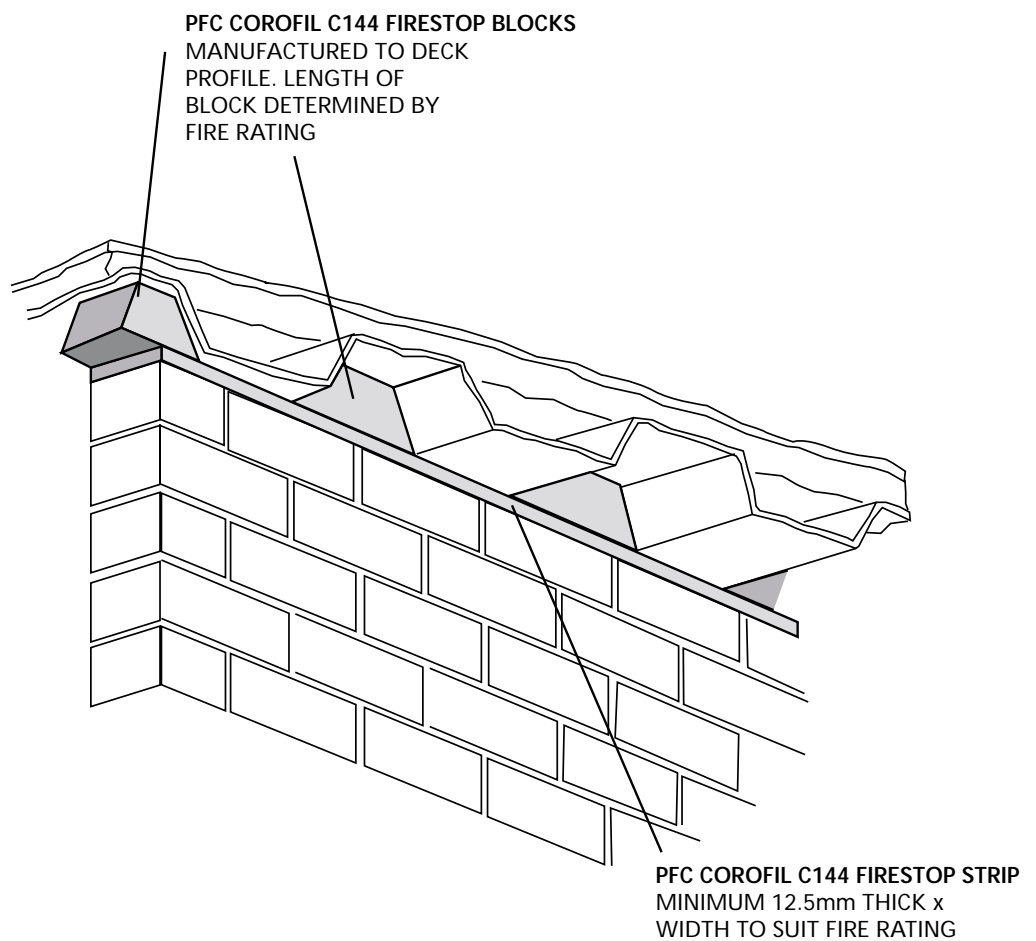

# Installation Drawing

Firestopping in conjunction with metal walls & deck roofing -  
along corrugations

